



CTP Stators

CTP Stators -

Part No.	Description	Machine Application
1480885	STATOR	773B/D, 775D
1T0538	STATOR A	924F, 926
1T0708	STATOR	637, 977K/L, 980, 983
1T1331	STATOR	814, 815, 950F, 960F
1T1397	STATOR	926, D3C, D5C
1T1701	STATOR	518, 814, 944
1T1713	STATOR	518, 518C
1T1729	STATOR A	938F/G, D5N,
1T1804	STATOR A	IT28G, 924F, 928G
1T1981	STATOR A	D4H, 517, 518
1T1991	STATOR A	518, 561H, 613C
1T2052	STATOR A	D6H, D7F, D8N
6Y1090	STATOR	966F, 970F, 972H
6Y3151	STATOR	950G, 962H
7T4753	STATOR	527, D5H
7T7678	STATOR	D9, D10R
8E3726	STATOR	992C, 988F, 836
8P5229	STATOR	D8L
8P9266	STATOR	D8L, D9L, D10N
9P9517	STATOR	966D, 966E, 966F
9W4702	STATOR	980C, 980G, 980K, 988B

Torque Converters are an essential part of your automatic transmission. They not only allow your vehicle to come to a complete stop without stalling the engine, but also provide more torque when accelerating out of a stop, ultimately, giving you more control over your machine's movements.

Stators are located at the center of the **Torque Converter**. They redirect the fluid returning from the turbine before it hits the pump again, increasing the efficiency of the **Torque Converter**.



Fluid enters here

* Other part no. not included in the list are available. Please contact your sales representative if you have any questions.
Part Numbers are used for reference purposes only

Quality with Value Guaranteed™