

**PARTS & SERVICE NEWS**

REF NO.

AH03534

DATE

October 27, 2003

(C)

Page 1 of 1


**SUBJECT:** Hydraulic oil level indicator with floating ball

**PURPOSE:** Easy viewing of the hydraulic oil level

**APPLICATION:** PC3000; PC4000; PC5500; PC8000 All Serial Numbers

**FAILURE CODE:** 601JZ9

**DESCRIPTION:**

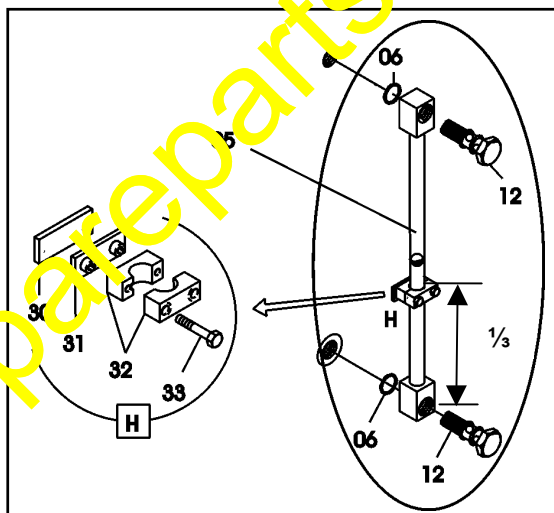

Pos.	Number	Part no.	Name
05* (PC3000)	1	907 594 40 (780 mm)	Fluid level indicator with ball
05* (PC4000)	1	907 564 40 (450 mm)	Fluid level indicator with ball
05* (PC5500)	1	907 564 40 (960 mm)	Fluid level indicator with ball
05* (PC8000)	1	907 604 40 (1139 mm)	Fluid level indicator with ball
30	1	652 801 40	Plate
31	1	533 989 99	Glue on plate
32	2	502 631 98	Half clamp
33	2	319 132 99	Bolt

\*Pos. 05 includes pos. 06 and 12.

1. Replace the fluid level indicator with position (05).
2. Attach the plates (30) and (31) at 1/3 of the length of glass tube (05).  
Clean the surface carefully and use a 2 components glue.
3. Install the half clamps (32) for supporting the glass tube.