

PARTS & SERVICE NEWS

REF NO.	BT99021
DATE	June. 3, 1999

Page 1 of 4

SUBJECT: INSTALLATION PROCEDURE OF FIRE EXTINGUISHER

PURPOSE: To introduce an optional fire extinguisher and its field installation procedures

APPLICATION: WA800-3 Wheel Loaders, Serial Nos.50001 and up
WA900-3 Wheel Loaders, Serial Nos.50001 and up
WA800-3LC Wheel Loaders, Serial Nos. A50001 and up
WA900-3LC Wheel Loaders, Serial Nos. A50001 and up

FAILURE CODE: 7P4199

DESCRIPTION:

1. Introduction

A fire extinguisher for putting out fires caused by burning of oil, electrical ignition, etc., is now available as an option.

When installing this option locally, follow the procedures introduced in this Service News.

2. List of parts.


Part No.	Part name	Purpose of part	Q'ty	Remark
09495-40000	Extinguisher		1	English (See Note)
01010-80616	Bolt		4	
01643-30623	Washer		4	
421-T25-2220	Seat		2	

Note: As the part No. for the fire extinguisher depends on the destination, select the correct part No. to suit your country before ordering.

Country	Part No.
(English)	(09495-40000)
Arabic	09495-11000
Czech	09495-21000
Persian	09495-12000
Indonesian	09495-31000
Polish	09495-16000
Spanish	09495-10000
German	09495-20000
Russian	09495-30000
French	09495-50000
Italian	09495-60000
Portuguese	09495-80000
Greek	09495-70000
Chinese	09495-90000

3. Reworking procedure

Weld the seat (421-T25-2220) on the ROPS, at the position as shown below.

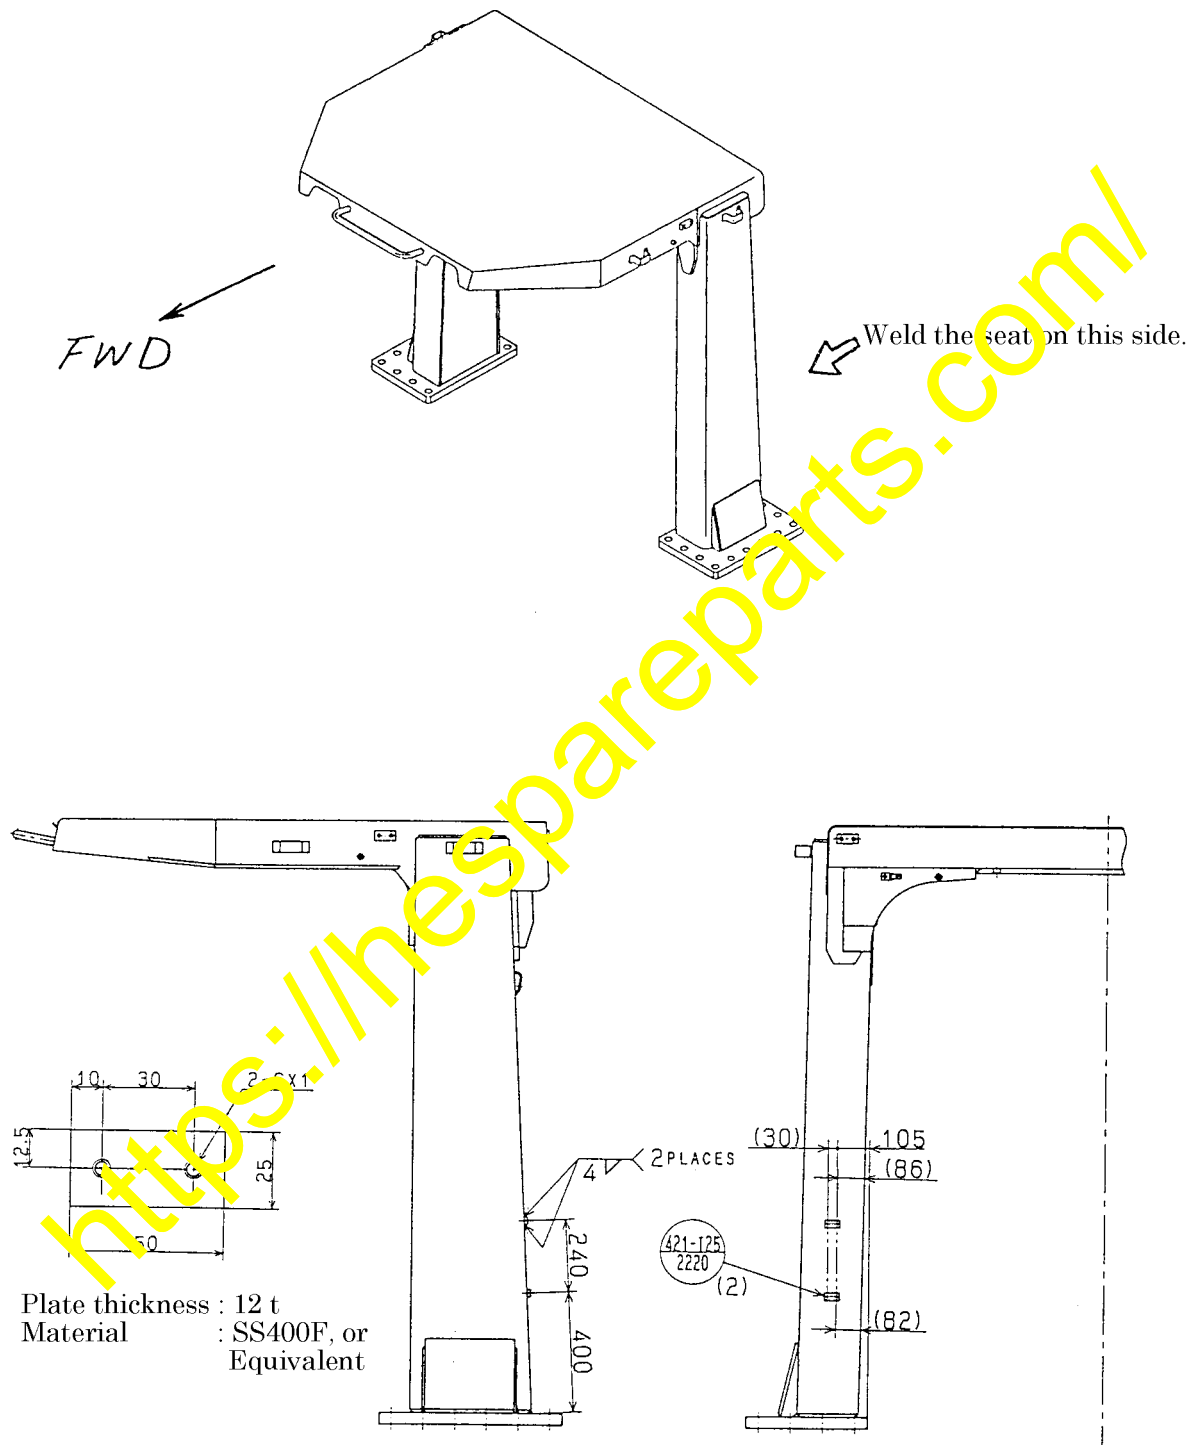

Note: After welding, perform touch-up painting.

4. Installation procedure

Install the procured parts as shown below.

※ M6 bolt tightening torque : 1.2 - 1.5 kgm (12.0 - 15.0 Nm)

